

Installation instructions for factory-trimmed-to-fit Semi-permanent Threshold Adaptors

Provided:
Threshold Adaptor
Silicone (100%) Bath tub Caulk, white
Instructions



Tools and supplies needed:
Pencil
Masking tape (optional)

1. Put the Adaptor in place and trace a pencil line on the shower bottom. See Figure 1.
2. Place a bead of silicone caulk just inside the pencil line.
3. Carefully put the threshold in position and put weights on it. See Figure 2.
4. Smooth out the excess silicone with a wet finger. Masking tape can help here. See Figure 3.
5. Caulk the ends where they meet the walls and smooth out the silicone.
6. Keep the weights in place for 12 hours.

To remove the Adaptor:
Carefully cut through all the caulk with an Exacto-type knife, holding the blade flat.
Pivot the threshold into the shower and pull it up.
Carefully remove the caulk with a single edged razor blade and "Goof Off" Remover (mfd. by Guardsman).

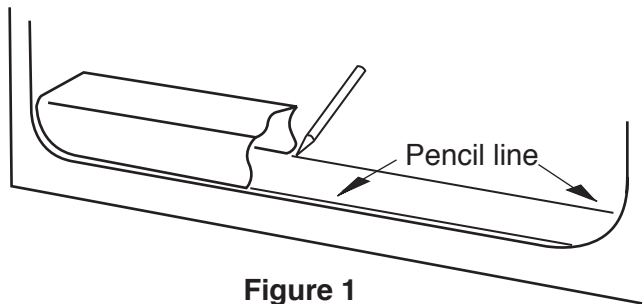


Figure 1

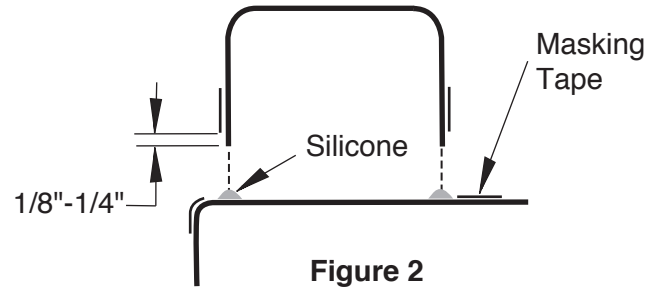


Figure 2

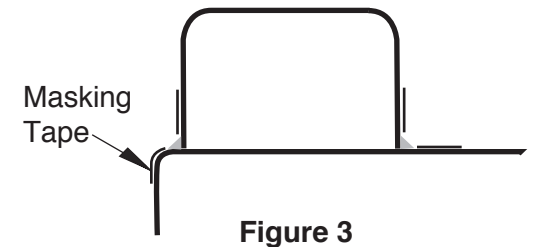


Figure 3

	TITLE : Installation Instructions Threshold Adaptor	SCALE :
	MODEL :	SHT. OF